

Trailer

- The ball valves are all currently closed, which is the best way to travel with water in the holding tank. Make sure to have the 2 valves between the tank and pressure washer open before turning it on.
- Make sure to have air venting at the top of your holding tank. Your pressure washer will pull water and cause inward pressure on it, which will then choke off the water flow capabilities.
- The air or antifreeze intake valve can be made custom, depending on how you will be winterizing your machine.

